

Safety Precautions 2	2007 Power Door, Infloor Rampvan and Kneel Electrical Schematic 23B, 24B
Towing 2	
Maintenance and Service Requirements 3	2007 Power Door, Foldout Rampvan and Kneel Wiring Diagram 25A, 26A
Maintenance and Lubrication Schedule 4-7	2007 Power Door, Foldout Rampvan and Kneel Electrical Schematic 25B, 26B
Troubleshooting Diagnosis Chart 8-13	2007 Seat and Airbag Wiring Diagram 27A, 28A
Below Floor Obstructions 14, 15	2007 Seat and Airbag Electrical Schematic 27B, 28B
Auxiliary Power Supply 16	
Wiring Diagrams and Electrical Schematics	Specifications 29
Pre-2007 Power Door, Infloor Rampvan and Kneel Wiring Diagram 17A, 18A	Repair Parts
Pre-2007 Power Door, Infloor Rampvan and Kneel Electrical Schematic 17B, 18B	Infloor Ramp Assembly 30, 31A, 32A
Pre-2007 Power Door, Foldout Rampvan and Kneel Wiring Diagram 19A, 20A	Pre-2007 Foldout Ramp Assembly 31B, 32B, 33
Pre-2007 Power Door, Foldout Rampvan and Kneel Electrical Schematic 19B, 20B	2007 Foldout Ramp Assembly 34, 35A, 36A
Pre-2007 Seat and Airbag Wiring Diagram 21A, 22A	Pre-2007 Kneel Actuator Assembly 36B, 37
Pre-2007 Seat and Airbag Electrical Schematic 21B, 22B	2007 Kneel Actuator Assembly 38, 39
2007 Power Door, Infloor Rampvan and Kneel Wiring Diagram 23A, 24A	Warranty 40, 41
	Return Authorization Procedure 41
	Dimensions 42