

# INTRODUCTION

## Introduction

The Braun Rampvan® lowered floor conversion is designed to provide years of pleasure and mobility independence. Familiarity with proper operation and maintenance procedures will help ensure safe, troublefree operation.

Consumer and commercial Rampvans are addressed in this manual. Safety precautions, maintenance and troubleshooting details are provided. A Repair Parts section with exploded views and corresponding parts lists are also provided.

Refer to the information applicable for the conversion you are servicing and disregard the information that does not apply.

A detailed warranty section is included. Refer to the Return Authorization Procedure when filling a warranty claim or ordering parts.

Contact The Braun Corporation at 1-800-THE LIFT® if any of this information is not understood.

## ⚠ WARNING

**Maintenance, lubrication, troubleshooting and service procedures must be performed as specified by an authorized service technician. Failure to do so may result in serious bodily injury and/or property damage.**

## Rampvan® Operation Quick Reference Guide

### Rampvan Operation Overview

This overview provides a simplified explanation of Rampvan operation. Read the entire owner's (operator's) manual for complete details. Contact The Braun Corporation at 1-800-THE LIFT® if any of this information is not understood.

### Power Operation

Rampvan power functions are managed by the One-Touch electronic control system. The control system can be activated using the Toyota remote keyless entry transmitter, any one of the interior mounted control switches or the optional magnetic entry.

### Interior Mounted Switches

Interior mounted switches display one of these graphics.



### Keyless Entry Operation

Toyota Remote Keyless Entry Transmitter

Press and release this switch.



### One-Touch Control Activation

Rampvan power door, kneel functions and power ramp are activated by **pressing and releasing** any control switch.

**Open Functions:** When activating the Open functions, the power door opens, the kneel system lowers the rear of the vehicle and the ramp deploys.

**Close Functions:** When activating the Close functions, the ramp stows, the kneel system raises the rear of the vehicle and the power door closes.

### Manual Operation

In event of power or equipment failure the door, ramp and kneel system can be manually operated. Read the operator's manual for further details.